Mounting Instructions

Lashing Points, weld-type TWN 1472, TWN 1473


Manufacturer: THIELE GmbH & Co. KG Tel: +49 (0) 2371 / 947 - 0 58640 Iserlohn www.thiele.de

1 Description and Intended Use

THIELE Lashing Points weld-type (type TWN 1472 and TWN 1473) are intended for attachment to steel structures to enable connections with lashing means. (TWN = THIELE standard)

Weld-type Lashing Points mainly consist of two forged weld-on supports and a forged ring.

Lashing Points can be loaded to 100 % in all tensile directions.

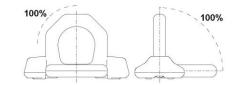

The rings are marked with the maximum Lashing Capacity LC in daN (Deka-Newton).

The rings of TWN 1472 are red powder coated, the rings of TWN 1473 are blue powder coated. The weld-on supports are not coated.

The Lashing Points feature a safety factor of at least 2 based on the maximum Lashing Capacity.

Usage for lifting is not permissible!

Lashing Points must exclusively be used

- within the limits of their permissible Lashing Capacity,
- within the temperature limits prescribed,
- with properly laid welding seams.

2 Safety notes



Risk of Injury! Make sure to use lashing means free from defects.

- Operators, fitters, and maintenance personnel must in particular observe this Instructions also from the used lashing chain assemblies, documentation DGUV V 1 issued by the German Employers' Liability Insurance Association, as well as the Operating Instructions of the vehicle.
- Outside the Federal Republic of Germany the specific provisions issued locally in the country where the items are used must also be observed.
- The directions given in these Operating Instructions and specified documentations relating to safety, assembly, operation, inspection, and maintenance must be made available to the respective persons.
- Make sure these instructions are available in a place near the product during the time the equipment is used.
- Please contact the manufacturer if replacements are needed.
- When performing work make sure to wear your personal protective equipment!
- Improper assembly and use may cause personal injury and/or damage to property.
- Assembly and removal as well as inspection and maintenance must exclusively be carried out by skilled and authorized persons.
- Structural changes are impermissible (e.g. welding, bending).
- Visually inspect the equipment prior to each use.
- Never put to use worn-out, bent or damaged Lashing Points.
- Only lashing loads the mass of which is less than or equal to the capacity
 of the Lashing Points.
- Do not use force when mounting/positioning the Lashing Points.
- Do not bend the ring.
 - Only remove lashing means manually (use your hands).
 - THIELE will not be responsible for damage caused through nonobservance of instructions, rules, standards and notes indicated!

In the event of doubts about the use, inspection, maintenance or similar things contact your safety officer or the manufacturer!

Transportation of persons is forbidden!


3 Commissioning

Prior to using the components for the first time make sure that

- the Lashing Points comply with the order and have not been damaged,
- test certificate and Mounting Instructions are at hand,
- markings correspond with what is specified in the documentation,
- the documentation is safely kept in an orderly manner.

Dispose of the packing in an environmentally compatible way according to local rules.

4 Technical Data

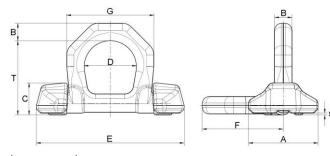

	Size	Dimensions [mm]					m]					
	3120	Α	В	d1	С	D	Е	F	G	L	Т	S
	8.000 daN	65	14	16	28	48	134	74	74	105	70	2
	13.500 daN	80	20	22	37	60	170	93	100	135	85	2

s	ize	Selection	Article No. ¹⁾	Mass [kg]	
	8.000 daN	COMPLETE	F35200	0,79	
TWN 1472	0.000 dail	only ring	F352000	0,39	
10010 1472	13.500 daN	COMPLETE	F35201	1,73	
	10.000 dail	only ring	F352010	0,96	
	8.000 daN	COMPLETE	F352001	0,79	
TWN 1473	0.000 dail	only ring	F352002	0,39	
10010 1473	13.500 daN	COMPLETE	F352011	1,73	
	10.000 dail	only ring	F352012	0,96	

1) Only standard Article Numbers, not for customized editions.


Assembly within steel constructions:

Rings can be used separately in steel structures. Please note the following items:

Size	Dimensi	sions [mm]		
3126	w	ØO		
8.000 daN	77 ⁺¹	19 ^{+0,5}		
13.500 daN	101 ⁺¹	25 ^{+0,5}		

THIELE is not responsible for the selection

of the material or further dimensions of the

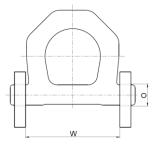

5 Mounting

steel construction.

5.1 Preparations

Make sure the welding surfaces are grinded down, flat, dry, free of impurity, flawless and weldable (material see ISO/TR 15608 table 1, group 1). Make sure the mounting place is able to absorb the maximum specified

Lashing Capacity multiplied with a safety factor of 1,25 without safety reducing deformation. [#]

The mounting location for each Lashing Point has to ensure that


- no areas of danger are created (crushing point, shearing point),
- transportation is not restrained by overhang,
- used lashing means (e.g. hooks) are freely movable and will not be bended,
- lashing accessories will not be bypassed,
- incorrect use is avoided,
- Lashing Points cannot be damaged,
- Lashing Points can be used easily.

5.2 Welding Instructions

The following general Welding Instructions shall be duly followed:

0	,
	DIN EN ISO 3834
Personell, Quality	DIN EN ISO 14731
	DIN EN ISO 9606
	DIN EN 1011
Welding process	DIN EN 1090
	DIN EN 15085
	DIN 15018
Further	ISO/TR 15608
	SEW 088


The positions of the welds are marked red in the sketch:

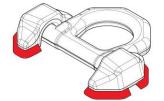

Take care to intermit the weld seam in the center on the outside to enable water to flow out.

Welding on the ring is not allowed!

Scetch:

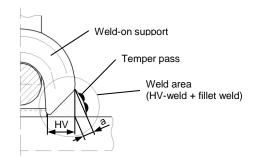

Size	Length of weld per support ²⁾ [mm]	HV- weld [mm]	Fillet weld a _{min} 陸 [mm]	Volume per support [cm ³]	
8.000 daN	2 x 55	5	4	ca. 4,5	
13.500 daN	2 x 75	6	4,5	ca. 7	

2) Following the outer contour of a weld-on support.

Welding sequence:

- 1. Check the suitability of the attachment location especially concerning to stability, weldability and a safety use.
- 2. Position the Lashing Point and mark the position of the first weld-on support.
- 3. Fix the first support and make the root run.
- 4. Clean the root run and make the final runs.
- Position the ring with one end into the first support and then the second support atop the free end of the ring. Consider and check dimension E. Fix the second support by tack-welding.
- Check dimension E and check the ring can move to 180°. Readjust the second support if necessary.
- 7. Weld the second support as the first one.
- 8. Check a smooth movement of the ring at last.

Do it analogously the same way for an assembly of single rings within a steel construction.

Miscellaneous:

- Minimum notched-bar impact strength values of ISO-V specimens KV=27J at -40 °C (e.g. S355J4G3 or S355NL, EN10025)
- 2. When selecting material grades other than those listed above please contact the base material and filler metal manufacturers for information.
- 3. The responsible welding supervisor must make sure the welding current is correctly adjusted to suit the given welding position.

6 Conditions of Use

6.1 Normal Use

The ring of the Lashing Point must always be freely movable. It must not rest on or be supported by other structural parts.

6.2 Influence of Temperature

The temperature range for use is -20 °C to +200 °C.

If the Lashing Points have been exposed to temperatures exceeding the maximum values specified they must no longer be used.

6.3 Environmental Influence

Lashing Points must not be used in environments where acids, aggressive or corrosive chemicals or their fumes are present.

Hot-dip galvanizing or a galvanic treatment is prohibited.

Welding process	Manual meta Nr. 111	l arc welding (MI	MA) DIN EN IS	O 9606-1;	Metal active gas welding(MAG) DIN EN ISO 9606-1; Nr. 135				
Welding groove	DIN EN ISO 9	9692-1:2013-12,	chapter 1.9.1	(siehe sketch)	DIN EN ISO 9692-1:2013-12, chapter 1.9.1 (see sketch)				
Quality grade		NEN ISO 5817 - NEN ISO 5817 -	-		Root run: DIN EN ISO 5817 - D Final run: DIN EN ISO 5817 - C				
Wire electrode	AWS A5.1-04	DIN EN ISO 25 I: E7018-1H4R 04: E4918-1H4F		B (2011)	DIN EN ISO 14341-A-G 42- 4- M21- 3Si1 DIN EN ISO 14341-A-G 46- 4- M21- 3Si2 AWS A5.18-05: ER70S-6 AWS A5.18M-05: ER48S-6				
Welding position	DIN EN ISO	6947: PA, PB, P	C, PE, PF		DIN EN ISO 6947: PA, PB, PC, PE, PF				
Preheating of parent metal		20 mm: 150 - 20 er metal): appr. 3		r 2 hours		Thickness ≥ 20 mm: 150 - 200 °C			
Interpass temperature	≤ 400 °C				≤ 400 °C				
Postweld heat treatment		30 mm: Temperin Using the 'tempe		r 1 minute per mr ue	Thickness ≥ 30 mm: 400 °C for 1 minute per mm wall thickness or using the 'temper pass' technique				
Pass	Root run	Final run Final run Final run Temper pass		Root run	Final run	Temper pass			
Wire or electrode diameter	2,5 mm	3,2 mm	4,0 mm	5,0 mm	3,25 mm/ 4,0 mm/ 5,0 mm	1 mm	1,2 mm	1 or 1,2 mm	
Welding current (=)	80-110 A	100-140 A	130-180 A	180-230 A	as final run	130 - 260A	190 - 325A	190 - 325A	
Electrode polarity	(= +)	(= +)	(= +)	(= +)	(= +)	(= +)	(= +)	(= +)	
Voltage	-	-	-	-	-	22 – 33 V	19 – 31 V	19 -31 V	
Shield gas ISO 14175; M2 1	-	-	-	-	-	10 - 12 l/min	12 - 14 l/min	12 - 14 l/min	
Kind of passes	Stringer pass	Stringer pass	Stringer pass	Stringer pass	Stringer pass	Stringer pass	Stringer pass	Stringer pass	

7 Inspections, Maintenance, Disposal

Inspections and maintenance must be arranged for by the Owner!

Inspection intervals shall be determined by the Owner!

Inspections must be carried out and documented by competent persons regularly but at least once a year, or more frequently if the Lashing Points are in heavy-duty service. After three years at the latest they must additionally be examined for cracks. A load test shall never be considered a substitute for this examination.

The results of the inspection shall be entered into a register (DGUV I 209-062 or DGUV I 209-063) to be prepared at first use. The register will show characteristic data of the Lashing Points as well as identity details.

Immediately stop using Lashing Points that show the following defects:

- missing or illegible identification/marking,
- deformation, fractures, cuts, notches,
- limited articulation,
- heating beyond permissible limits,
- severe corrosion,
- wear exceeding 10 %, for example in the ring diameter area,
- weld failures.

Inspection Service

THIELE offers inspection, maintenance and repair services by trained and competent personnel.

Maintenance

Maintenance and repair work must only be performed by competent persons.

Minor notches and cracks at the rings may be eliminated by careful grinding observing the maximum cross section reduction requirement of 10 % and avoid making more severe cuts or scores.

All maintenance and repair activities are to be documented.

Disposal

All components and accessories of steel taken out of service are to be scrapped in line with local regulations and provisions.

8 Storage

Lashing Points are stored in dry locations at temperatures ranging between 0 °C and +40 °C.

9 Publishing Information

THIELE GmbH & Co. KG, Werkstraße 3, 58640 Iserlohn, Germany Tel.: +49(0)2371/947-0 // Email: info@thiele.de

© THIELE GmbH & Co. KG, 2015. All rights reserved.

"#" Changes to previous edition.